

2004 Honda Element DX

2003-06 ELECTRICAL Fuse/Relay Boxes - Element


2003-06 ELECTRICAL**Fuse/Relay Boxes - Element****CONNECTOR TO FUSE/RELAY BOX INDEX****UNDER-HOOD FUSE/RELAY BOX****UNDER-HOOD FUSE/RELAY BOX REFERENCE**

Socket	Ref	Terminal	Connects to
A	10	2	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)))
A/C compressor clutch relay	6	4	
A/C condenser fan relay	3	4	
B	15	5	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)))
Blower motor relay	8	4	
C	11	12	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)))
D	14	14	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)))
E	13	7	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)))
ELD unit	12	3	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH)))
Horn relay	4	4	
Headlight relay	9	4	
Radiator fan relay	5	4	
Rear window defogger relay	7	4	
T101 (Battery)	2		Starter subharness (see STARTER SUBHARNESS))

2004 Honda Element DX

2003-06 ELECTRICAL Fuse/Relay Boxes - Element

T102 (Alternator)	1		Starter subharness (see STARTER SUBHARNESS)
----------------------	---	--	---

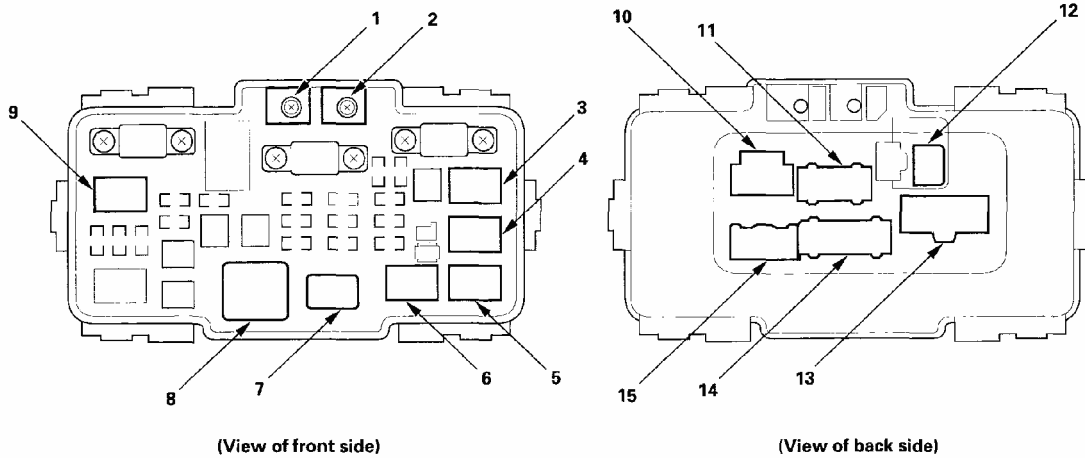

G03679720

Fig. 1: Identifying Fuse/Relay Box Connector And Terminals
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

UNDER-DASH FUSE/RELAY BOX

UNDER-HOOD FUSE/RELAY BOX REFERENCE

Socket	Ref	Terminal	Connects to
A	2	5	Dashboard wire harness B (see DASHBOARD WIRE HARNESS B)
B	3	6	Dashboard wire harness B (see DASHBOARD WIRE HARNESS B)
C	1	14	Dashboard wire harness B (see DASHBOARD WIRE HARNESS B)
D	4	12	ECM/PCM wire harness (see ECM/PCM WIRE HARNESS)
E	5	13	ECM/PCM wire harness (see ECM/PCM WIRE HARNESS)
F	19	12	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (DASHBOARD))
G	9	10	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (DASHBOARD))
H	8	3	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (DASHBOARD))

2004 Honda Element DX


2003-06 ELECTRICAL Fuse/Relay Boxes - Element

I	20	5	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (DASHBOARD)</u>)
J	21	8	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (DASHBOARD)</u>)
K	23	17	Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>)
L	24	10	Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>)
M	22	12	Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>)
N	27	6	Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>)
O	26	12	Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>)
P	7	18	ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>)
Power window relay	12	4	
Q	6	8	ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>)
R	10	6	ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>)
S	25	2	Dashboard wire harness B (see <u>DASHBOARD WIRE HARNESS B</u>)
Starter cut relay	14	4	
T	18	3	Multiplex control unit service check connector
Taillight relay	13	4	
Turn signal/hazard relay	11	3	
U	15	1	Optional connector
V	16	4	Optional connector
W (Memory erase signal (MES) connector)	17	2	ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>)

2004 Honda Element DX

2003-06 ELECTRICAL Fuse/Relay Boxes - Element

X (plugs directly into the multiplex control unit)	28	8	Dashboard wire harness B (see <u>DASHBOARD WIRE HARNESS B</u>)
Y (plugs directly into the multiplex control unit)	29	13	Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>)

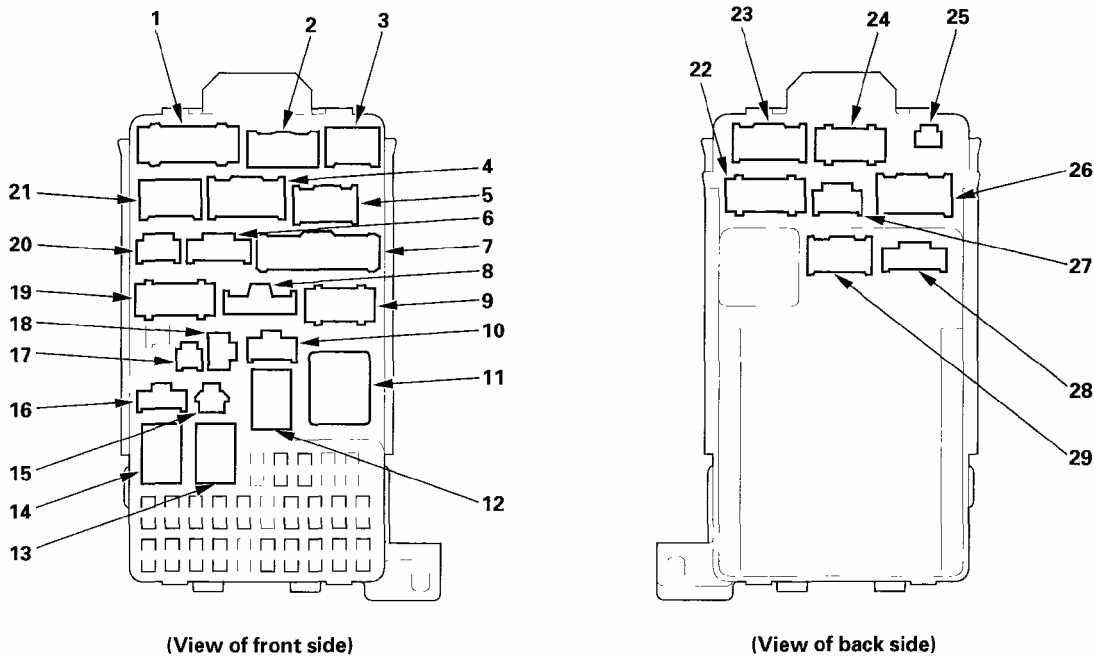

G03679721

Fig. 2: Identifying Fuse/Relay Box Connector And Terminals
 Courtesy of AMERICAN HONDA MOTOR CO., INC.