

ANTI-LOCK BRAKE SAFETY PRECAUTIONS

Article Text

1993 Honda Prelude

For Cadi Centre Nsk CA 95051

Copyright © 1998 Mitchell Repair Information Company, LLC

Sunday, July 08, 2001 11:20AM

ARTICLE BEGINNING

GENERAL INFORMATION

Anti-Lock Brake Safety Precautions

* PLEASE READ THIS FIRST *

This article is intended for general information purposes only. This information may not apply to all makes and models. If vehicle is equipped with Anti-Lock Brake System (ABS), refer to appropriate ANTI-LOCK BRAKE SYSTEM article in the BRAKES section for description, operation, depressurizing, testing, system bleeding, trouble shooting and servicing of specific system.

WARNING: Failure to depressurize ABS could lead to physical injury.

ANTI-LOCK BRAKE SAFETY PRECAUTIONS

WARNING: Failure to depressurize ABS could lead to physical injury.

- * NEVER open a bleeder valve or loosen a hydraulic line while ABS is pressurized.
- * NEVER disconnect or reconnect any electrical connectors while ignition is on. Damage to ABS control unit may result.
- * DO NOT attempt to bleed hydraulic system without first referring to the appropriate ANTI-LOCK BRAKE SYSTEM article in the BRAKES section.
- * Only use specially designed brake hoses/lines on ABS equipped vehicles.
- * DO NOT tap on speed sensor components (sensor, sensor rings). Sensor rings must be pressed into hubs, NOT hammered into hubs. Striking these components can cause demagnetization or a loss of polarization, affecting the accuracy of the speed signal returning to the ABS control unit.
- * DO NOT mix tire sizes. Increasing the width, as long as tires remain close to the original diameter, is acceptable. Rolling diameter must be identical for all 4 tires. Some manufacturers recommend tires of the same brand, style and type. Failure to follow this precaution may cause inaccurate wheel speed readings.
- * DO NOT contaminate speed sensor components with grease. Only use recommended coating, when system calls for an anti-corrosion coating.
- * When speed sensor components have been removed, ALWAYS check sensor-to-ring air gaps when applicable. These specifications can be found in each appropriate article.
- * ONLY use recommended brake fluids. DO NOT use silicone brake

- fluids in an ABS equipped vehicle.
- * When installing transmission devices (CB's, telephones, etc.) on ABS equipped vehicles, DO NOT locate the antenna near the ABS control unit (or any control unit).
 - * Disconnect all on-board computers, when using electric welding equipment.
 - * DO NOT expose the ABS control unit to prolonged periods of high heat (185 oF/85oC for 2 hours is generally considered a maximum limit).

END OF ARTICLE