

## Article Text

## ARTICLE BEGINNING

# 1993 Manual Transmission Servicing

## Honda; Prelude

## IDENTIFICATION

## MANUAL TRANSAXLE APPLICATIONS TABLE

Model		Transaxle Code
2.2L	.....	M2L5
2.2L (VTEC)	.....	M2F4
2.3L	.....	M2S4

## LUBRICATION

## SERVICE INTERVALS

Change lubricant every 30,000 miles or 24 months.

## CHECKING FLUID LEVEL

Check fluid level with transaxle at operating temperature. Ensure engine is off and vehicle is level. Remove fill plug on side of transaxle case. Fluid level should be at bottom of fill hole. Tighten oil filler plug to 33 ft. lbs. (45 N.m) and oil drain plug to 30 ft. lbs. (40 N.m).

## RECOMMENDED FLUID

Under normal conditions, use SAE 30 or 20W-40 with a rating of SF or SG. On vehicles used mostly in cold climates, use 10W-30 or 10W-40.

## FLUID CAPACITIES

### TRANSAXLE REFILL CAPACITIES TABLE

	After Draining	After Overhaul
Application	Qts. (L)	Qts. (L)
Prelude .....	2.0 (1.9)	..... 2.1 (2.0)

## **ADJUSTMENTS**

**NOTE:** External linkage adjustments are not required. Inspect gearshift linkage components for wear or damage. Replace components as required.

**END OF ARTICLE**