

CUSTOMIZE PARAMETERS

HINT:

The followings are the possible items to be customized.

NOTICE:

- After confirming whether the items of the customer's request is applicable or not for the customized items, perform the customize operation.
- Be sure to record the current value before customizing.
- In case of performing the troubleshooting, pay attention as there is a possibility that the function is OFF by customizing. (Example: In case of the symptom in which "The wireless operation does not function", check that the wireless operation is not OFF by customizing, then perform the troubleshooting.)

ILLUMINATED ENTRY

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
LIGHTING TIME (Lighting Time)	15 s	To change the lighting time after closing the door. (It will quickly fade out in case of turning the ignition ON.)	7.5 s / 15 s / 30 s
ILLUMI SYSTEM (Operation of illumination)	ON	Function to light up the step light, center console light and door inside handle light when one of the following occurs; the ignition turned ON, door unlock or door open.	ON / OFF
LIGHT CONTROL (Light control)	ON	Function to light up the step light and door inside handle light when the ignition switch is ON and the shift position is not P.	ON / OFF
I/L ON / UNLOCK (Interior light ON w/ door key unlock)	ON	Function to light up the interior light*, ignition light and step light when unlocking with the door key cylinder. *: Interior light comes on when the interior light switch is at the DOOR position.	ON / OFF
I/L ON / ACC OFF (Illumination system with ACC OFF)	ON	Function to light the interior light* and door courtesy light when the ignition switch is operated from "ACC" to "LOCK". *: interior light comes on when the interior light switch is at the DOOR position.	ON / OFF

LIGHT CONTROL

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
LIGHT OFF DELAY (Light Auto OFF Delay)	30 s	Function to keep on lighting the headlight for a certain period of time after closing all the doors with the ignition switch turned OFF from ON under the condition that the light control switch is at HEAD or AUTO with the headlight ON.	OFF / 30 s / 60 s / 90 s
LIGHT CTRL TYPE (Control Type)	CURRENT	To change the control logic when the light control switch is AUTO position. Refer to the *1 illustration.	CURRENT / OLD

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
SENSITIVITY (Turn ON luminous intensity)	NORMAL	To adjust the sensitivity of the lighting illumination. Refer to the *2 illustration.	DARK2 / DARK1 / NORMAL / LIGHT1 / LIGHT2
DISP EX ON SEN (Display Extinction Luminous Intensity)	NORMAL	To change the brightness of lowering the lights such as the indicator light of the combination meter, A/C indicator light, clock. Refer to *3 illustration.	DARK2 / DARK1 / NORMAL / LIGHT1 / LIGHT2
DISP EX OFF SEN (Display Extinction Release Luminous Intensity)	NORMAL	To change the brightness of canceling the lowering the lights such as the indicator light of the combination meter, A/C indicator light, clock. Refer to *4 illustration.	DARK2 / DARK1 / NORMAL / LIGHT1 / LIGHT2

HINT:
Sensitivity adjustment can hardly be confirmed. Please check by customer's actual driving.

Illustration *1

	Brightness of the surrounding when lighting	Lighting delay	Delay of turning light off	**2
OLD	Old logic	6 sec.	6 sec.	3 sec.
CURRENT	New logic **1 ('97/8-)	15 sec.	15 sec.	15 sec.

**1: The new one has the logic to light up two times brighter than the old logic.

**2: Delay time until the headlight is turned on when it suddenly gets dark.



Illustration *2

Lighting brightness	Dark ←————→ Bright
Setting	DARK2 — DARK1 — NORMAL — LIGHT1 — LIGHT2

Illustration *3

Brightness of lowering the light	Dark ←————→ Bright
Setting	DARK2 — DARK1 — NORMAL — LIGHT1 — LIGHT2

Illustration *4

Brightness when canceling the lowering of the lights	Dark ←————→ Bright
Setting	DARK2 — DARK1 — NORMAL — LIGHT1 — LIGHT2