

## INSPECTION

### 1. INSPECT HEADLIGHT DIMMER SWITCH

- (a) Measure the resistance according to the value(s) in the table below.

**Resistance:**  
**Light control switch**

| Tester connection | Switch condition | Specified condition |
|-------------------|------------------|---------------------|
| 12 - 18           | OFF              | 10 kΩ or higher     |
| 18 - 19           | OFF              | 10 kΩ or higher     |
| 19 - 20           | OFF              | 10 kΩ or higher     |
| 12 - 18           | TAIL             | Below 1 Ω           |
| 12 - 18           | HEAD             | Below 1 Ω           |
| 18 - 20           | HEAD             | Below 1 Ω           |
| 12 - 19           | AUTO             | Below 1 Ω           |

### Headlight dimmer switch

| Tester connection | Switch condition | Specified condition |
|-------------------|------------------|---------------------|
| 12 - 17           | FLASH            | Below 1 Ω           |
| 12 - 16           | LOW BEAM         | Below 1 Ω           |
| 11 - 12           | HI BEAM          | Below 1 Ω           |

### Turn signal switch

| Tester connection | Switch condition | Specified condition |
|-------------------|------------------|---------------------|
| 12 - 13           | Right turn       | Below 1 Ω           |
| 12 - 13           | Neutral          | 10 kΩ or higher     |
| 13 - 15           | Neutral          | 10 kΩ or higher     |
| 12 - 15           | Left turn        | Below 1 Ω           |

### Fog light switch


| Tester connection | Switch condition    | Specified condition |
|-------------------|---------------------|---------------------|
| 3 - 4             | OFF                 | 10 kΩ or higher     |
| 3 - 4             | Fog light switch ON | Below 1 Ω           |


If the result is not as specified, replace the headlight dimmer switch.

## INSTALLATION

### 1. INSTALL HEADLIGHT DIMMER SWITCH

- (a) Install the headlight dimmer switch as shown in the illustration.

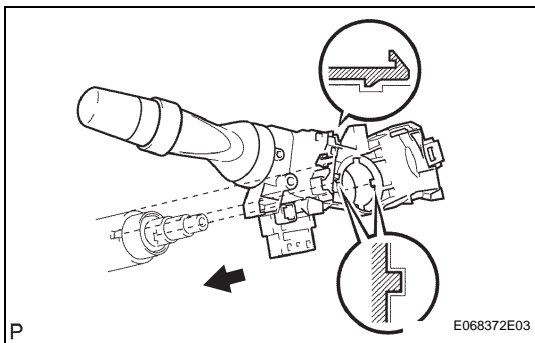

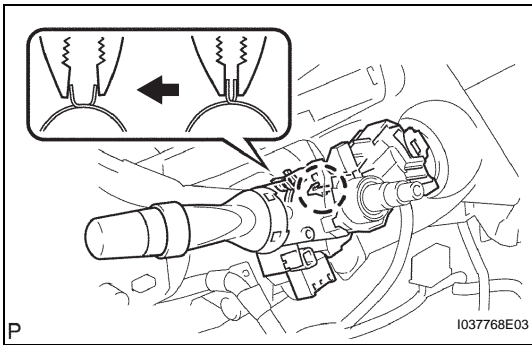

- (b) Install the headlight dimmer switch with the claw and the clamp.
- (c) Connect the connector.

2. **INSTALL WIPER SWITCH**
3. **INSTALL SPIRAL CABLE** (See page [RS-399](#))
4. **INSTALL STEERING COLUMN COVER** (for Power Tilt and Power Telescopic) (See page [SR-57](#))
5. **INSTALL STEERING COLUMN COVER** (for Manual Tilt) (See page [SR-45](#))
6. **ADJUST SPIRAL CABLE** (See page [RS-400](#))
7. **INSTALL STEERING WHEEL ASSEMBLY** (for Power Tilt and Power Telescopic) (See page [SR-57](#))
8. **INSTALL STEERING WHEEL ASSEMBLY** (for Manual Tilt) (See page [SR-45](#))
9. **INSPECT STEERING WHEEL CENTER POINT**
10. **INSTALL STEERING PAD** (See page [RS-388](#))
11. **INSTALL STEERING WHEEL NO.2 COVER LOWER** (See page [RS-389](#))
12. **INSTALL STEERING WHEEL NO.3 COVER LOWER** (See page [RS-389](#))
13. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
14. **INSPECT STEERING PAD** (See page [RS-389](#))
15. **PERFORM INITIALIZATION**
16. **INSPECT SUPPLEMENTAL RESTRAINT SYSTEM WARNING LIGHT** (See page [RS-25](#))