

REAR DOOR COURTESY SWITCH

INSPECTION

1. INSPECT REAR DOOR COURTESY SWITCH

- (a) Remove the rear door courtesy switch.
- (b) Measure the resistance according to the value(s) in the table below.

Resistance

Tester Connection	Condition	Specified Condition
1 - Switch body	Pushed	10 k Ω or higher
1 - Switch body	Not pushed	Below 1 Ω

If the result is not as specified, replace the rear door courtesy switch.

