



TRANSFER OIL

ON-VEHICLE INSPECTION

1. INSPECT TRANSFER OIL

- (a) Remove the transfer case No. 1 plug and gasket No. 1.
- (b) Check that the oil level is 0 to 5 mm (0 to 0.1968 in.) below the lower side of the transfer case No. 1 plug hole.

NOTICE:

- **When changing oil, recheck the oil level after driving.**
- **Excessively large or small amounts of oil may cause some trouble.**

- (c) When the oil level is too low, check for oil leakage.
- (d) Tighten the transfer case No. 1 plug with a new gasket No. 1.

Torque: 49 N*m (500 kgf*cm, 36 ft.*lbf)

2. ADD TRANSFER OIL

- (a) remove the transfer case No. 1 plug and gasket No. 1 and add the oil.

NOTICE:

- **When checking oil, make sure the vehicle is level.**
- **When adding oil, pour it slowly.**
- **Add oil several times in interval.**

HINT:

within 0 to 5 mm (0 to 0.1968 in.) below the lower side of the transfer case No. 1 plug hole.

- (b) After leaving it alone for 5 minutes, recheck the oil level.
- (c) Tighten the transfer case No. 1 plug with a new gasket No. 1.

Torque: 49 N*m (500 kgf*cm, 36 ft.*lbf)